

## POSITIVE CRANKCASE VENTILATION (PCV) VALVES

**395** SKUs

PCV valves reroute positive pressure produced by the crankcase back into the engine's combustion chambers via the intake manifold. The PCV valve will open to allow air out of the crankcase and close to block pressure from returning back into it.



For complete application data, visit StandardBrand.com




**OE-matched** 

## **ENGINE OIL SEPARATORS**

Engine oil separators stop oil from recirculating into the cylinders, preventing carbon build up. Excessive carbon build up on the valves can cause drivability issues and lead to major repairs. Standard® Engine Oil Separators are engineered and tested to keep vehicle systems operating exactly as designed.



SKUs 32M+VI0

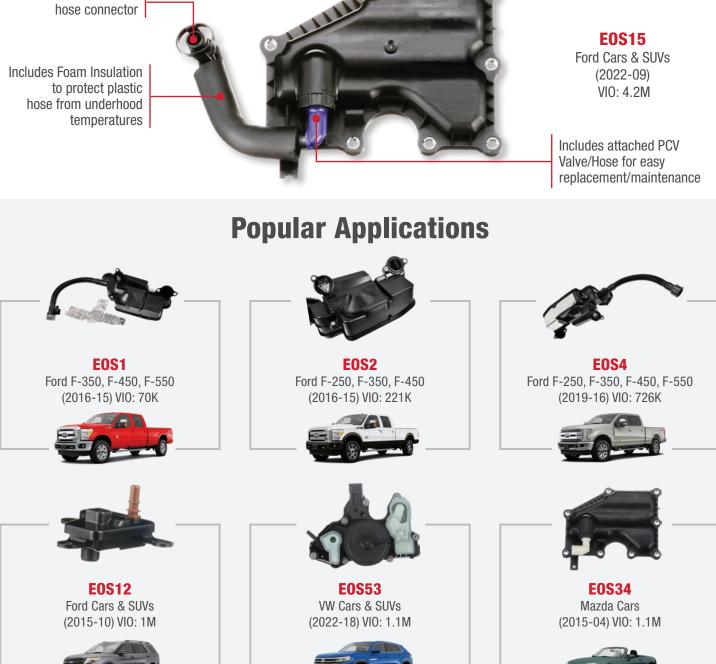

For complete application data, visit StandardBrand.com



StandardBrand.com